

T-88 TURBO DRYER PARTS BREAKDOWN CHAMBER AND SPINNER		
NO.	QTY	DESCRIPTION
39	1	Assembly Spinner
40	1	Assembly Chamber
44	6	Hex Head Cap Screws
45	6	Lock Washer
46	6	Hex Head Cap Screws
47	1	Chamber Bottom
48	1	Assembly Limit Switch & Wires
49	2	Pan Head Screws
50	2	Lock Washer
51	2	Flat Washers
52	1	Key
53	1	Assembly Cover (Includes 54-56)
54	1	Assembly Handle
55	1	Handle Piece
56	2	Socket Head Shoulder Screw
57	4	Lock Washer
58	4	Pan Head Screws
59	2	Cotter Pin
60	1	3/8" - 90° Connector
61	22"	3/8" Liquitite Conduit
62	1	Hinge Pin
63	1	Wire Joint (Not Shown)
64	2	Stubby Spring Plunger
65	1	Switch Box (Steam Heat or No Heat)

This parts breakdown is for current models only.
For older models, please refer to the parts list in your manual.
Contact Nobles for price and availability.

T-88 CHAMBER AND SPINNER

