

TURBO DRYER PARTS BREAKDOWN BASE AND MOTOR		
NO.	QTY	DESCRIPTION
1	1	Base
	1	Base, Epoxy Painted
2	1	Bearing Spacer
3	1	Spinner Lockwasher
4	1	Grease Overflow Pipe
5	1	Oil Seal
6	1	Oil Seal
7	1	Upper Bearing
8	1	Lower Bearing
9	1	Grease Fitting
10	2	Dowel Pins
11	1	Pipe Coupling
12	1	Grease Pipe
13	1	Spinner Shaft Spacer
10	1	Bearing Cover
	1	Bearing Cover Epoxy Painted
15	1	Pipe Nipple 11" (Steel)
	1	Pipe Nipple 11" (Stainless Steel)
16	1	Pipe Nipple 1.5" (Steel)
	1	Pipe Nipple 1.5" (Stainless Steel)
17	1	Pulley - Turbo 22 or 28
	1	Pulley - Turbo 88
18	1	90° Pipe Elbow
	1	90° Pipe Elbow (Stainless Steel)
19	1	Bushing
20	1	Jam Nut (Steel)
	1	Jam Nut (Stainless Steel)
21	6	Lockwasher
22	6	Hex Head Cap Screws
23	1	Motor Mounting Ring
25	1	Motor , 2 HP
26	2	V Belt - Turbo 22 or 28
	2	V Belt - Turbo 88
27	1	Sheave - Turbo 22 or 28
	1	Sheave - Turbo 88
28	1	Bushing
29	3	Carriage Bolt
30	3	Hex Head Bolt
31	5	Lockwasher
32	3	Lockwasher
33	4	Hex Head Cap Screw
34	1	Hex Head Cap Screw
35	1	3/8" x 45° Connector
36	3	Hex Nut
37	6	Wire Connector (Not Shown)
38	1	Wire Assembly

This parts breakdown is for current models only.
For older models, please refer to the parts list in your manual.
Contact Nobles for price and availability.

TURBO DRYER PARTS BREAKDOWN BASE AND MOTOR

