

TURBO DRYER PARTS BREAKDOWN CHAMBER AND SPINNER		
NO.	QTY	DESCRIPTION
39	1	Assembly Spinner (Turbo 22 includes 40-41)
	1	Assembly Spinner (Turbo 28 includes 40-41)
40	4	Hex Nut
41	1	Fan
42	4	Lock Washer
43	1	Assembly Chamber (T-22)
	1	Assembly Chamber (T-28)
47	1	Key
48	1	Assembly Limit Switch & Wires
49	6	Hex Head Cap Screws
50	2	Pan Head Screws
51	2	Split Lockwashers
52	2	Flat Washers
53	1	Assembly Cover (Includes 54-56)
54	1	Assembly Handle
55	2	Socket Head Shoulder Screws
56	1	Handle Piece
57	2	Cotter Pin
58	1	Hinge Pin
59	4	Lockwashers
60	4	Pan Head Screws
61	1	3/8" 90° Connector
62	19"	3/8" Liquitite Conduit (T-22)
	21"	3/8" Liquitite Conduit (T-28)
63	1	Switch Box Single/Double Heat
	1	Switch Box Single Heat
	1	Switch Box Steam Heat or No Heat
64	2	Stubby Spring Plunger
65	1	Wire Joint (Not Shown)

This parts breakdown is for current models only.
For older models, please refer to the parts list in your manual
Contact Nobles for price and availability.

TURBO DRYER PARTS BREAKDOWN CHAMBER AND SPINNER

